


## Annelie basin 820 mm

### Installation instructions

DADO recommend that you use a qualified installer. Adhere to all instructions. We will not accept responsibility or incorrect installation.

The Annelie basin sold in Australia comes with a service hatch. The pipes can be fastened through the service hatch.

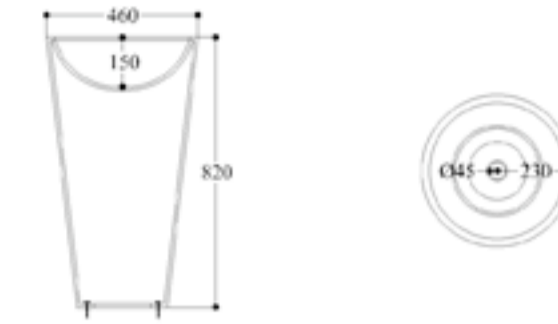

**1**

Ensure that the drain pipe in the floor is thoroughly cleaned before the basin is placed into position and that the waste down pipe is positioned correctly.

**2**

Before the basin is fixed to the floor ensure that the basin waste and the drainage pipe line up.

**3**

Make sure all surfaces are dry and stable before installing the basin. This will ensure durable adhesion.


**4**

Mark an area with tape on the floor where the basin is going to stand with the template provided, the floor can now be properly prepared. Drill 12mm holes in the floor. Space hole with 20mm drill to make space for nuts. Use Epoxy or high quality tile adhesive fix bolts to floor and the bottom of the basin.

**5**

Position the basin and connect the waste, use a spirit level to ensure that the basin is level. Fill the basin with water, let the water run through the waste and check for leaks. when all looks good. Leave glue to set.

Dado recommends the product protection remains on the bathtub until all construction is complete. Drain and waste assembly not included and must be ordered separately.

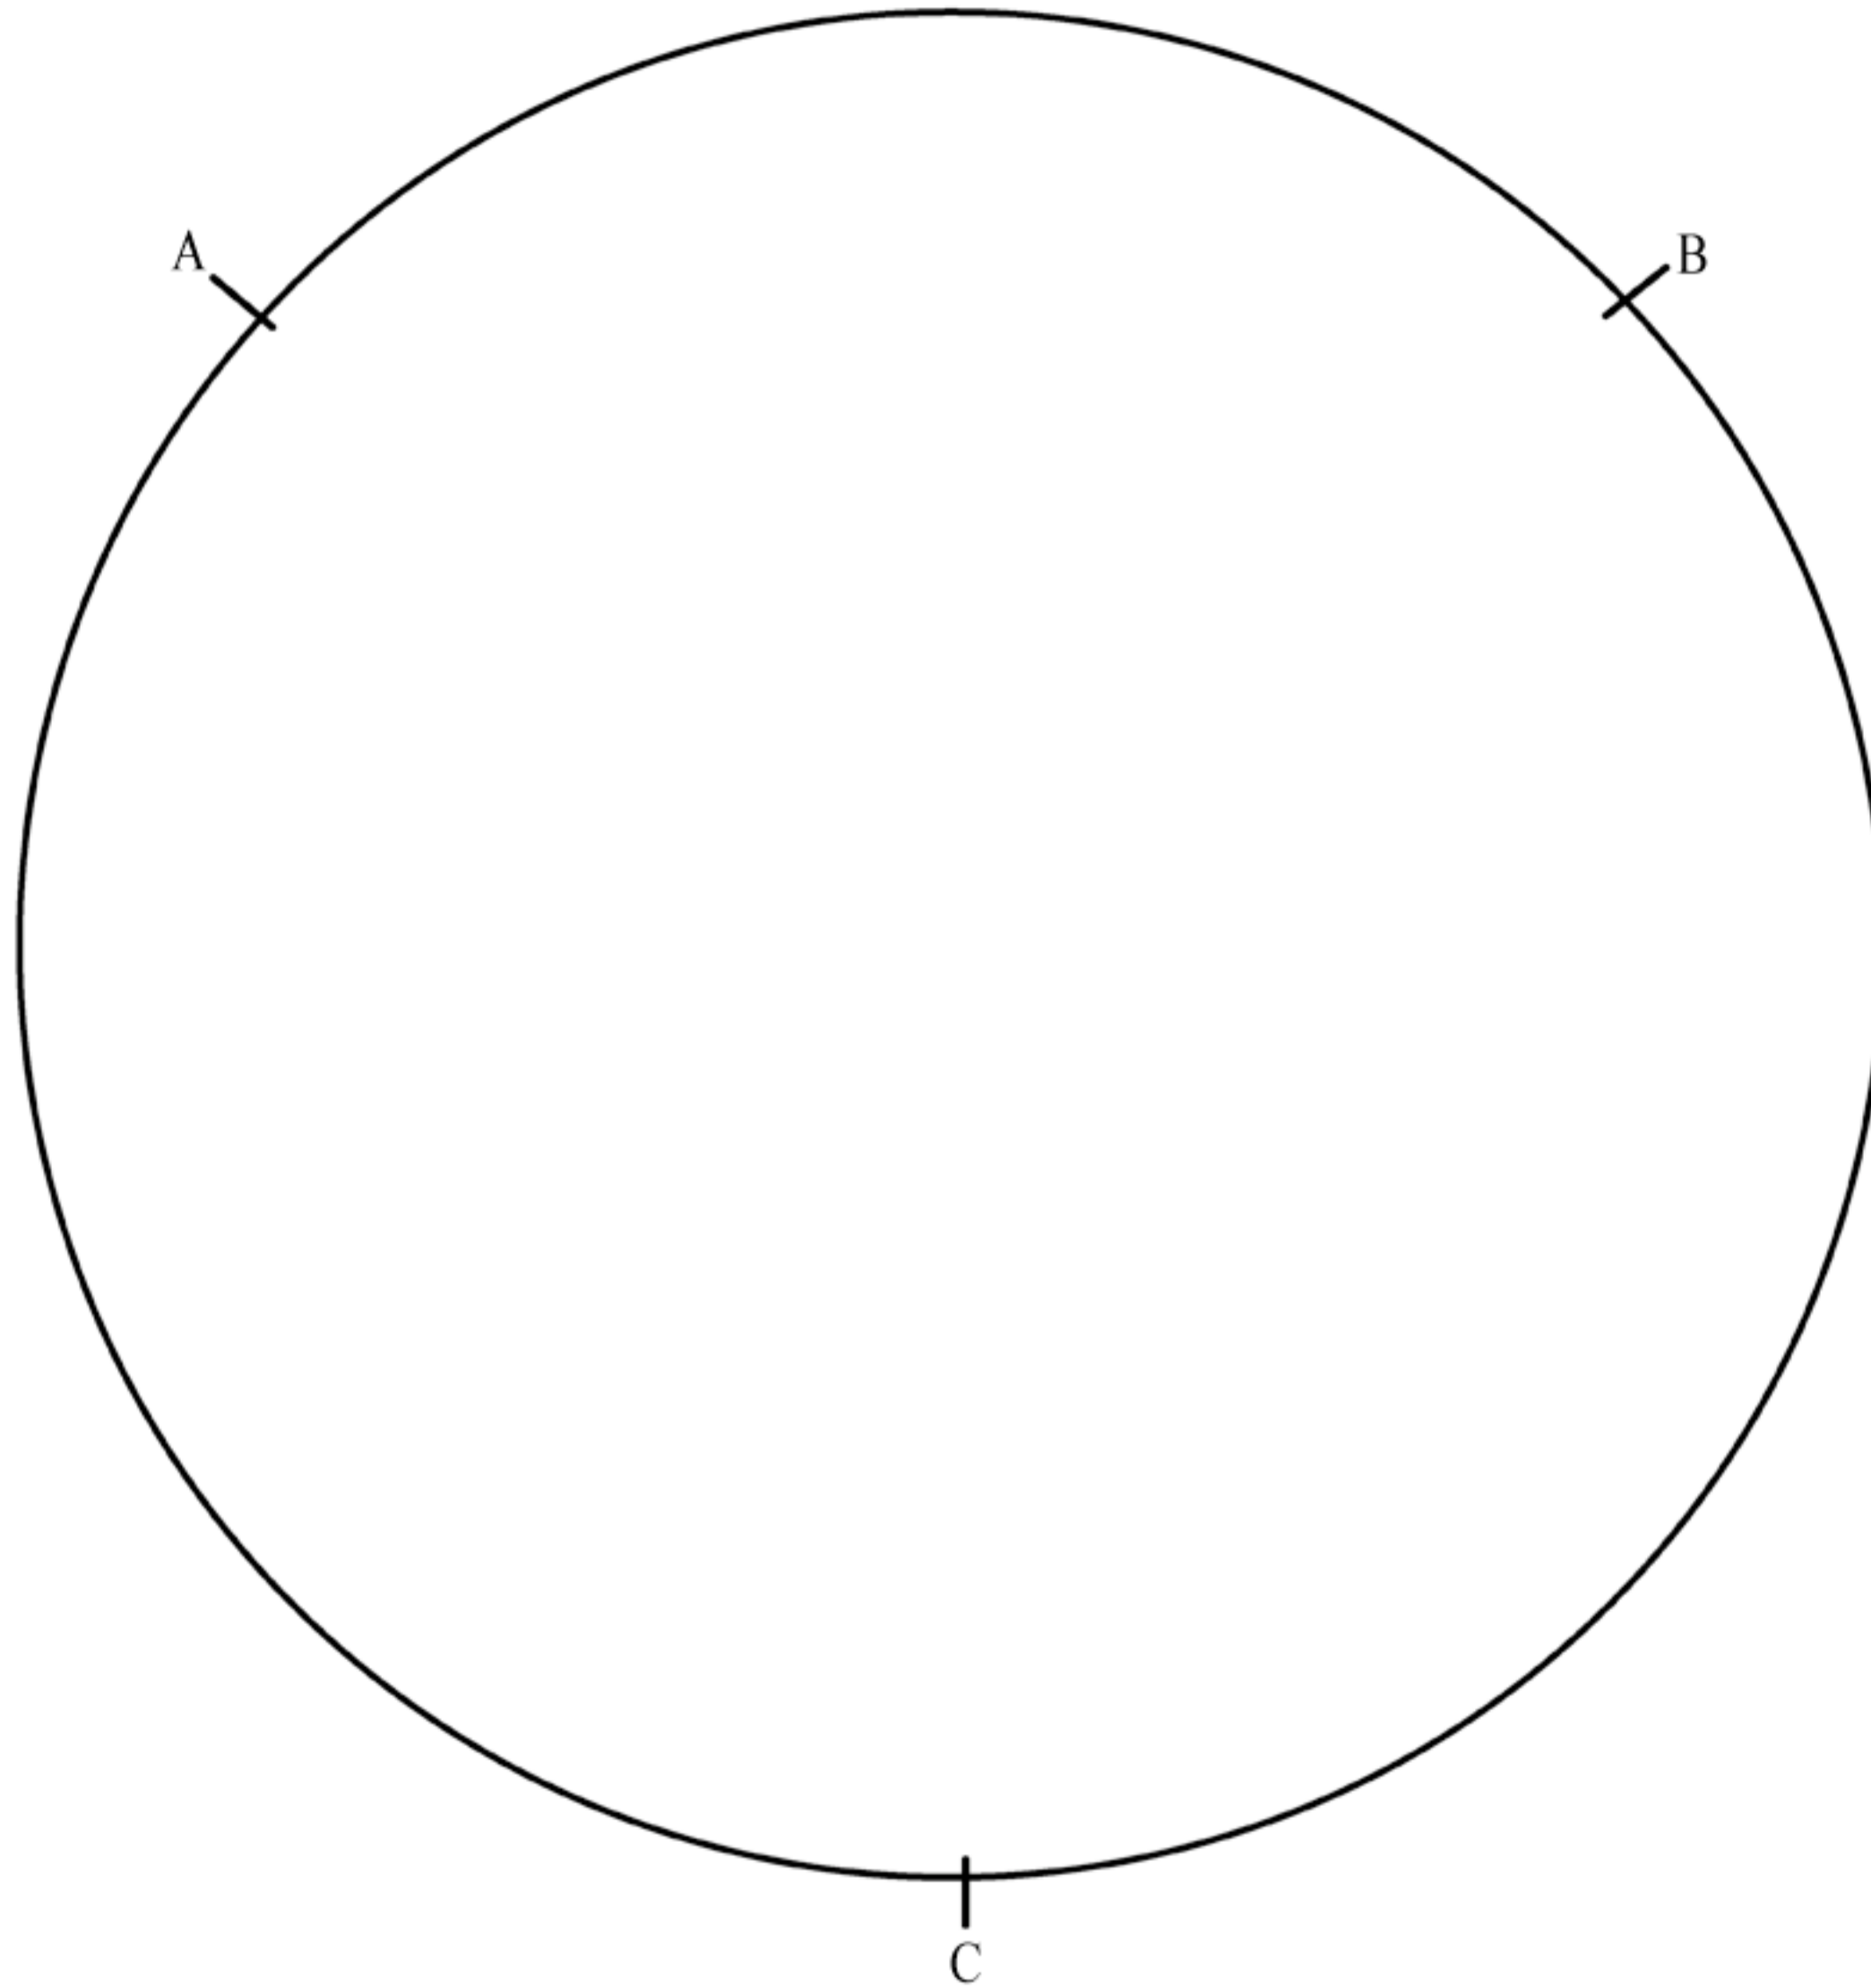

A B C registration points