



VisionFine vanity range

Installation instructions

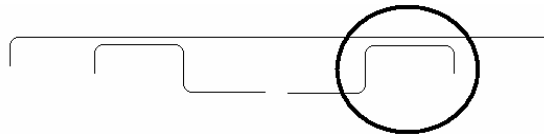

- Place the basin at the required height against the wall and trace bottom profile to correctly place the brackets

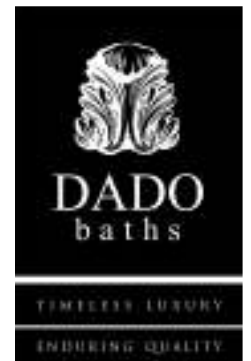

- Level area and fix bracket to wall with adjusting screws facing upwards



- Place expansion bolts through bracket into the wall and fasten.



- Place vanity over brackets, adjust with screws until level.
- Apply adequate silicone to secure basin to wall and brackets.
- Holes for taps can be drilled by using a diamond core drill with pilot, see bottom for indicators
- Standard un-slotted extended basin waste without plug is suggested



For any further queries kindly contact:
support@dadobaths.co.za or
www.dadobaths.co.za

